

Cuddly toy – projector

HEDGEHOG HUGO

CONSUMER INFORMATION

- This instruction sheet contains important information. Please keep it for future reference.
- The playmat requires three 1.5V AA alkaline batteries for operation (not included).
- Tool required for battery installation: screwdriver (not included).

BATTERY INSTALLATION

- Locate the battery compartment lid on the back of the hub (projector).
 - Loosen the screws in the battery compartment lid with a screwdriver.
 - Remove the battery compartment lid.
 - Insert three 1.5V AA alkaline batteries.
- Hint: It is recommended to use long-life alkaline batteries.
- Reattach the battery compartment lid and tighten the screws with a screwdriver.
 - Do not over-tighten.
 - If this toy begins to operate erratically, you may need to reset the electronics.
 - Slide the power/volume switch off and then back on.
 - If toy sounds become quieter or the toy plays no sound, replace the batteries. (Batteries must be replaced by an adult.)


BATTERY SAFETY INFORMATION

In exceptional circumstances, batteries may leak and cause an injury by chemical burn or damage the product. To avoid battery leakage:


- Do not use old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel cadmium).
- Insert batteries into the battery compartment as shown.
- Remove batteries if a longer period of non-use is expected. Always remove discharged batteries from the product. Dispose of batteries safely. Do not throw the product into the fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not throw used batteries away into the waste bin.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- Removable rechargeable batteries must be charged only under adult supervision.

USER MANUAL


1. When you turn on the main switch button, the baby's laughter will rise.

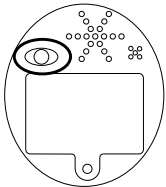

2. When you turn on the power button (on the front of the toy), it starts working. It will show the light and music function at the same time.

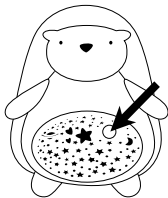

3. There are 6 colors light (one by one) and 60 pcs songs.
4. While the light and music play together, you need to press the soft part of the toy (belly) so that the light turns off. When you press the same part of the toy again, the light will turn on.

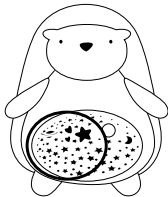

5. If you only want to display lights, press the soft part of the toy while the power button on the front of the toy is turned off.
6. If you want to toggle the song, press the power button to stop the song. Then you can press the button again to play the next song. If you don't press the power button, the songs will play in a loop.
7. The volume can be adjusted. The main switch button on the back of the device has the ability to be set at two volume levels - in the middle the sound is quiet, and when you set it to the right the sound is loud.

